## Replacement parts:

# Sata Jet 90, 90S, 90SL Conventional Nickel Plated

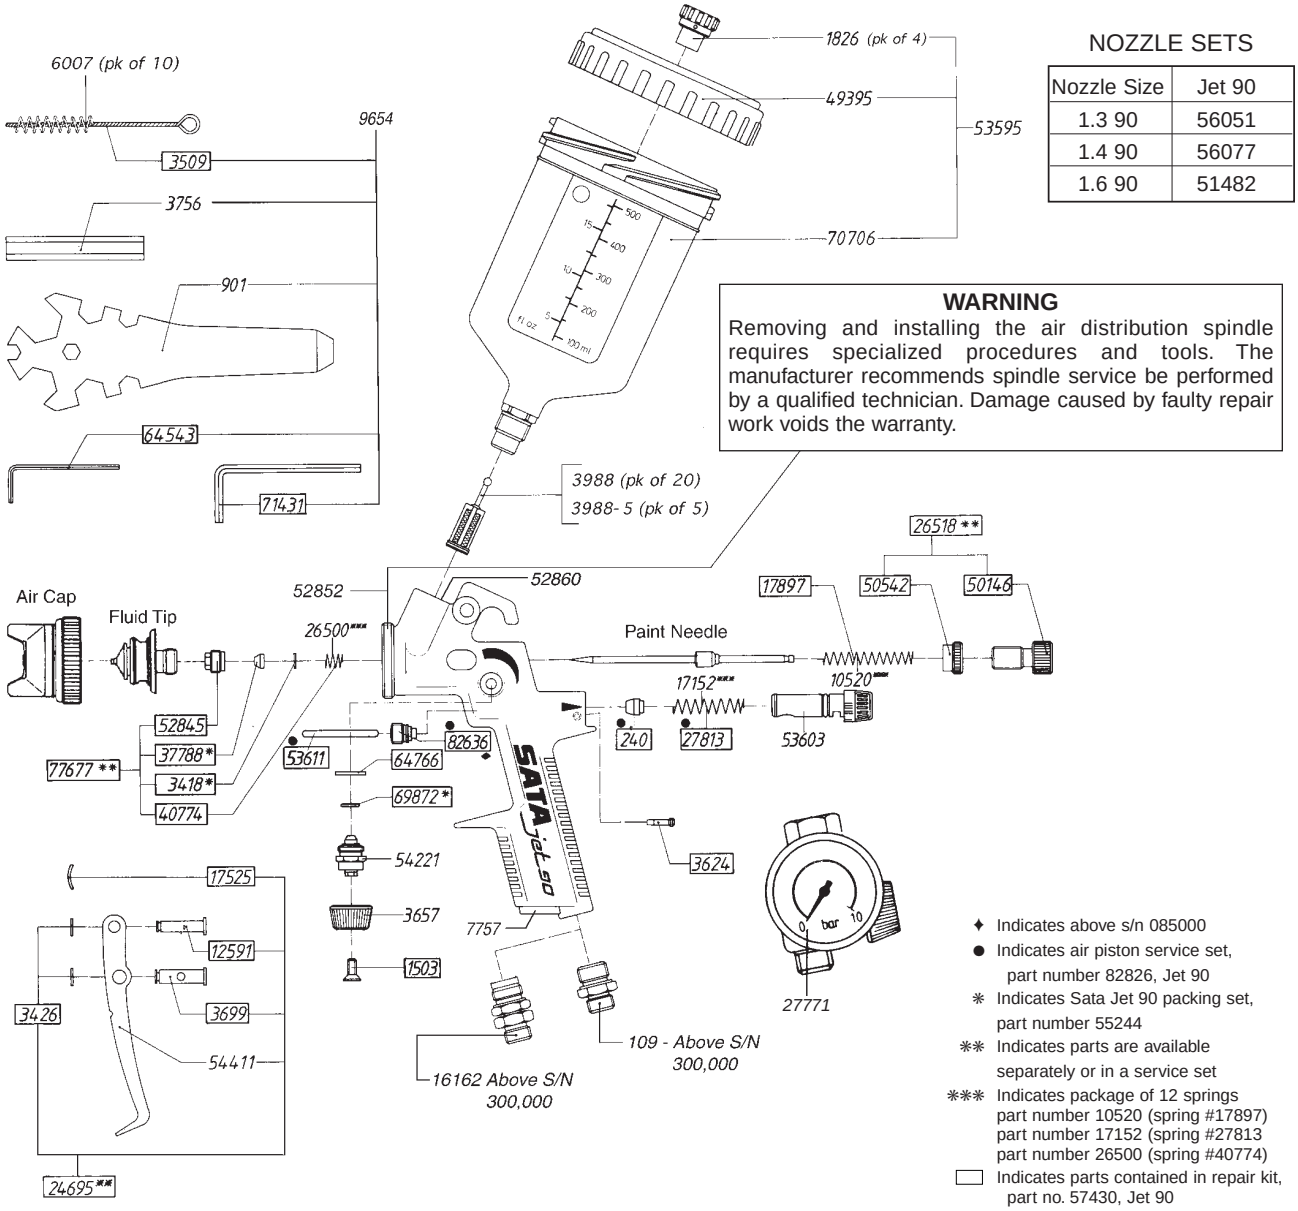


**WARNING**

Removing and installing the air distribution spindle requires specialized procedures and tools. The manufacturer recommends spindle service be performed by a qualified technician. Damage caused by faulty repair work voids the warranty.

NOZZLE SETS

| Nozzle Size | Jet 90 |
|---|---|
| 1.3 90 | 56051 |
| 1.4 90 | 56077 |
| 1.6 90 | 51482 |

✦ Indicates above s/n 085000
● Indicates air piston service set, part number 82826, Jet 90
✳ Indicates Sata Jet 90 packing set, part number 55244
✳✳ Indicates parts are available separately or in a service set
✳✳✳ Indicates package of 12 springs
part number 10520 (spring #17897)
part number 17152 (spring #27813
part number 26500 (spring #40774)
▭ Indicates parts contained in repair kit, part no. 57430, Jet 90

| Part # | Description |
|---|---|
| 109 | Air inlet fitting, 1/4 BSP |
| 240 | Air piston packing |
| 901 | Universal spanner wrench |
| 1503 | Fan control screw |
| 1826 | Non–drip device, pk of 4 |
| 3418 | Packing washer |
| 3426 | Circlip, pin |
| 3509 | Standard cleaning brush |
| 3624 | Pin, micrometer |
| 3657 | Knob, fan control |
| 3699 | Pin, lower trigger |
| 3756 | Deep socket wrench |
| 3988 | Paint sieve, pk of 20 |
| 3988–5 | Paint sieve, pk of 5 |
| 6007 | Std. cleaning brush, pk of 10 |
| 7757 | ColorCode disc, pk of 4 |
| 9654 | Tool set, Jet 90 |
| 10520 | Needle spring, pk of 12 #17897 |
| 12591 | Pin, upper trigger |
| 16162 | Swival fitting, 1/4 BSP |
| 17152 | Air piston spring, pk of 12 #27813 |
| 17525 | Lock spring |
| 17897 | Needle spring |
| 24695 | Trigger service set, Jet 90 |
| 26500 | Needle packing spring, pk of 12 #40774 |
| 26518 | Fluid control service set |
| 27771 | Air micrometer with gauge |
| 27813 | Air piston spring |
| 37788 | Packing seal |
| 40774 | Needle packing spring |
| 49395 | 0.6 liter cup lid |
| 50146 | Fluid regulating control |
| 50542 | Lock nut, fluid control |
| 52845 | Needle packing holder |
| 52852 | Air distribution spindle |
| 52860 | Threaded cup insert bushing |
| 53595 | 0.6 liter plastic gravity cup, complete |
| 53603 | Air micrometer |
| 53611 | Air piston, Jet 90 |
| 54221 | Fan control, Jet 90 |
| 54411 | Trigger |
| 55244 | Packing set: Jet 2000, RP, 90 |
| 57430 | Repair kit, Jet 90 (above s/n 85,000) |
| 64543 | Allen wrench, 2mm |
| 64766 | Spacer ring |
| 69872 | Control packing ring |
| 70706 | 0.6 liter cup without lid |
| 71431 | Allen wrench, 4mm |
| 77677 | Needle packing service set |
| 82636 | Air piston packing holder |
| 82826 | Air piston service set, Jet 90 |

PARTS FOR SATA JET 90 WITH S/N BELOW 85,000

| | |
|---|---|
| 9670 | socket/screwdriver wrench |
| 35766 | Air piston service set |
| 40584 | Air piston spring |
| 52811 | Air piston packing holder |
| 52894 | Swivel connection, Jet 90 |
| 55061 | Air inlet fitting, Jet 90 |
| 55178 | Repair kit, Jet 90 (below s/n 85,000) |
| 57604 | Air piston |
| 64758 | “O” ring, air piston |
| 71829 | Packing washer, air piston |